

## Tooling System

### Basic information

- Basic Structure
- Cutting
- Performance


### Detailed Information

- Options
- Applications
- Capacity Diagram
- Specifications

### Customer Support Service


## PUMA 2100 / 2100L / 2600 / 2600L

Unit : mm (inch)

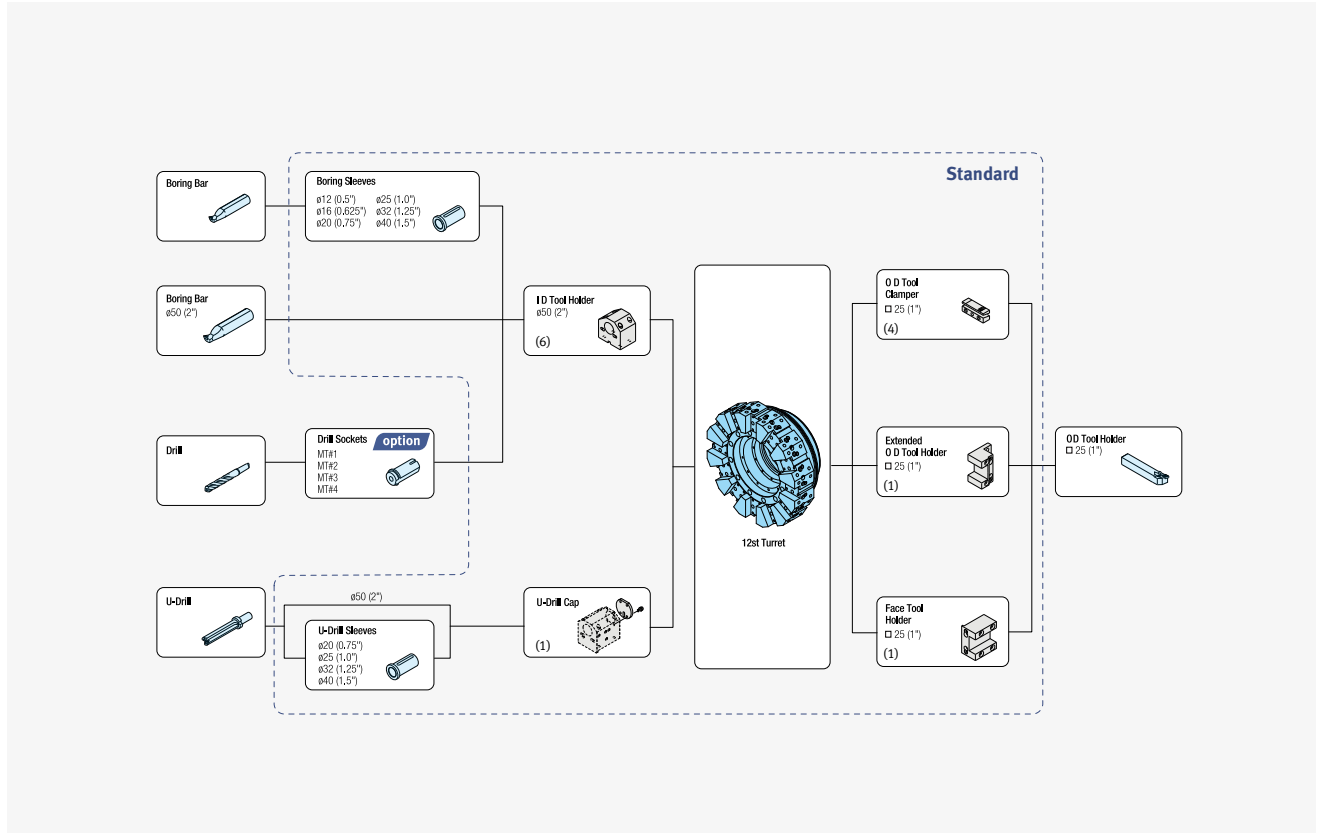


## PUMA 2100S / 2100LS / 2600S / 2600LS

Unit : mm (inch)

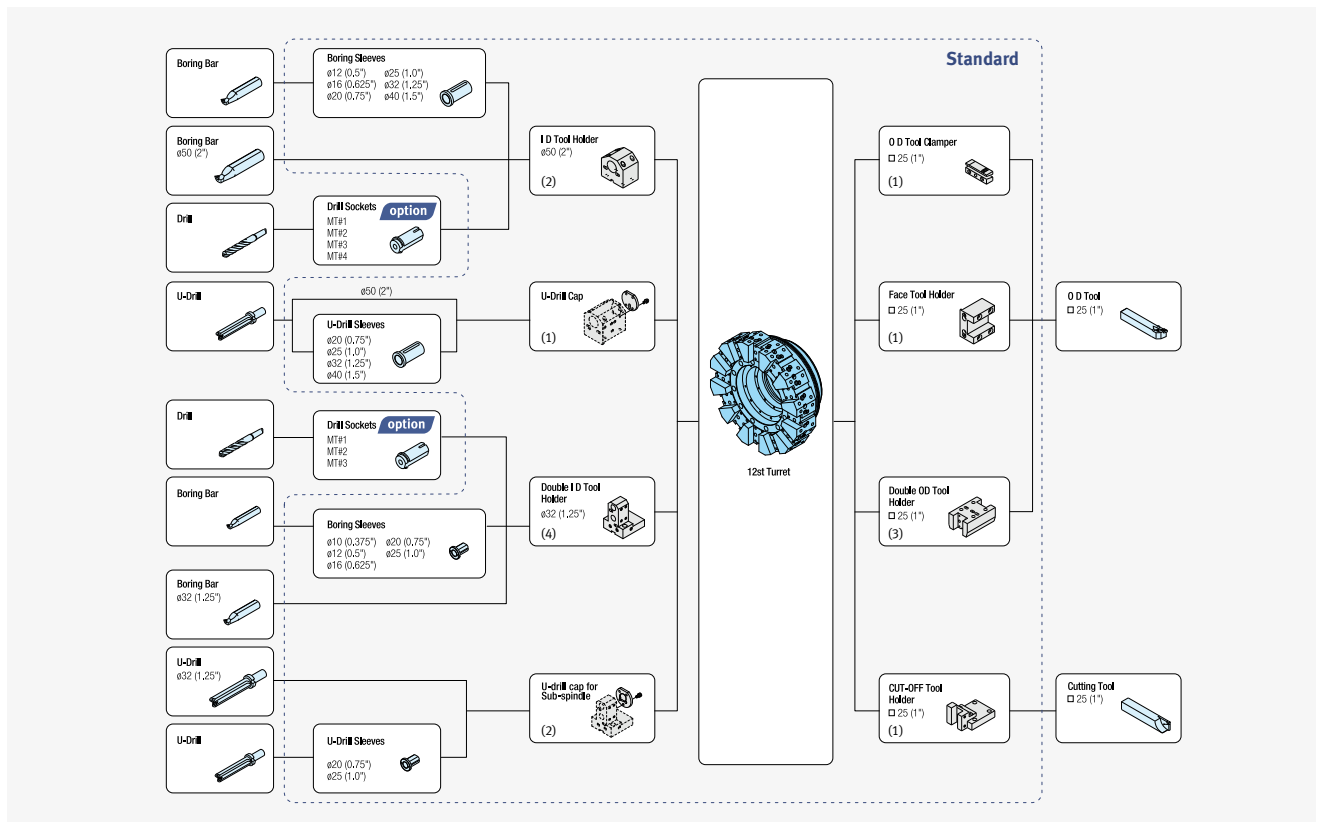


**PUMA 2100M / 2100LM / 2100Y / 2100LY (12 station-BMT55P)**

Unit : mm (inch)

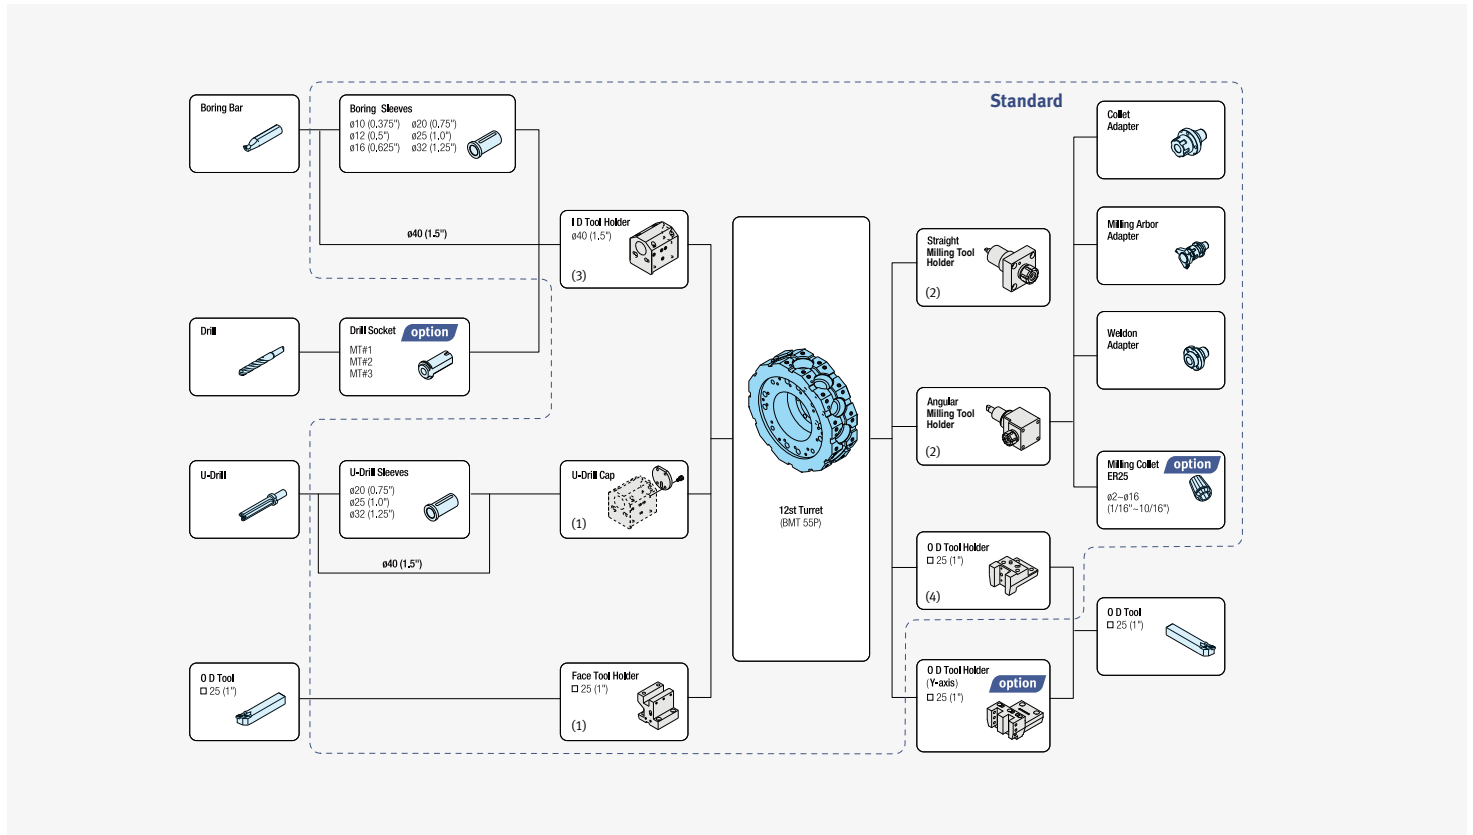

**PUMA 2100M / 2100LM / 2100Y / 2100LY (24 station. - BMT55P) option**

Unit : mm (inch)

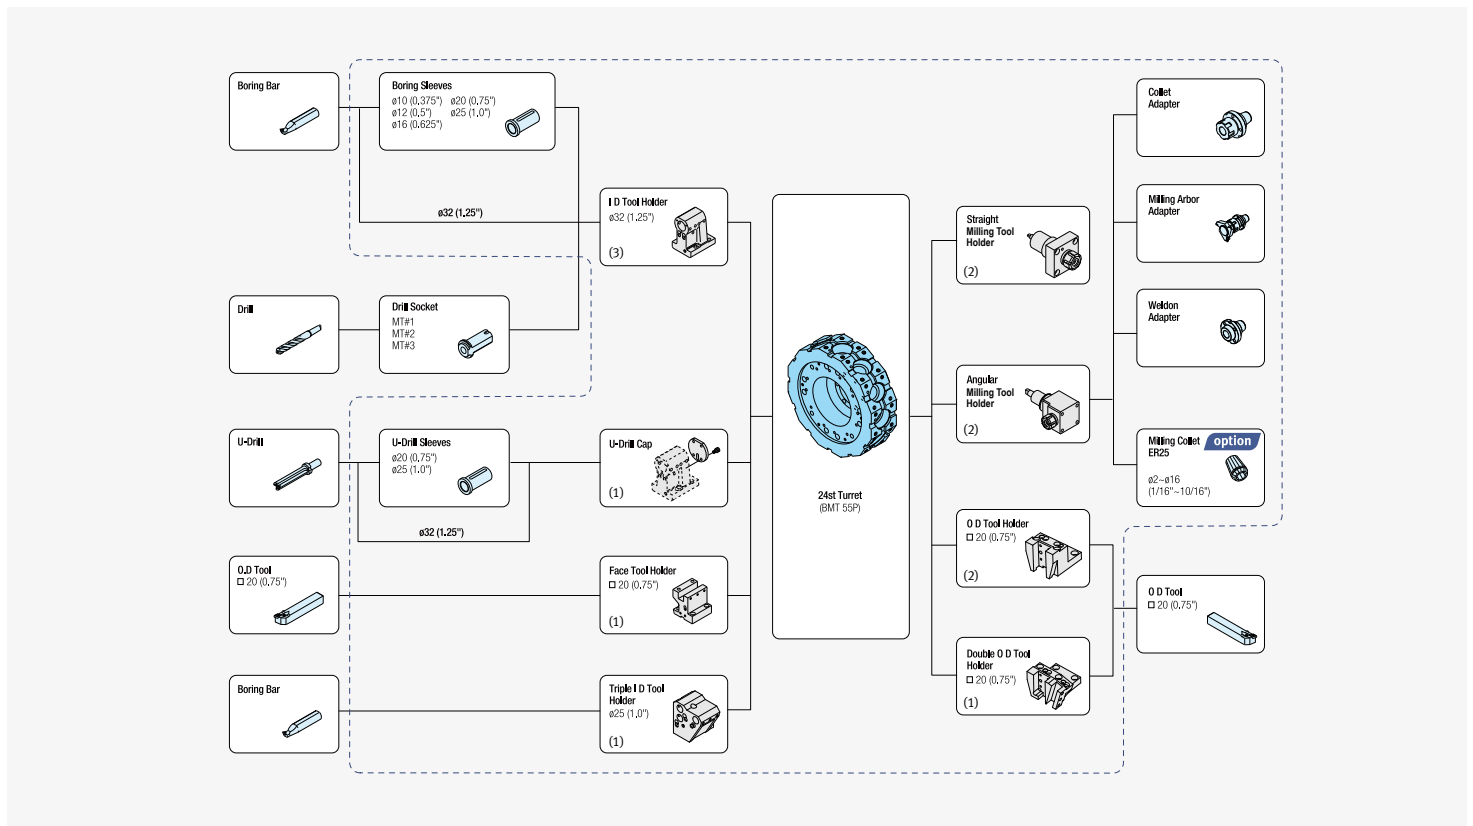

# Tooling System

## Basic information

- Basic Structure
- Cutting
- Performance


## Detailed Information

- Options
- Applications
- Capacity Diagram
- Specifications

## Customer Support Service


### PUMA 2100MS / 2100LMS / 2100SY / 2100LSY (12 station-BMT55P)

Unit : mm (inch)

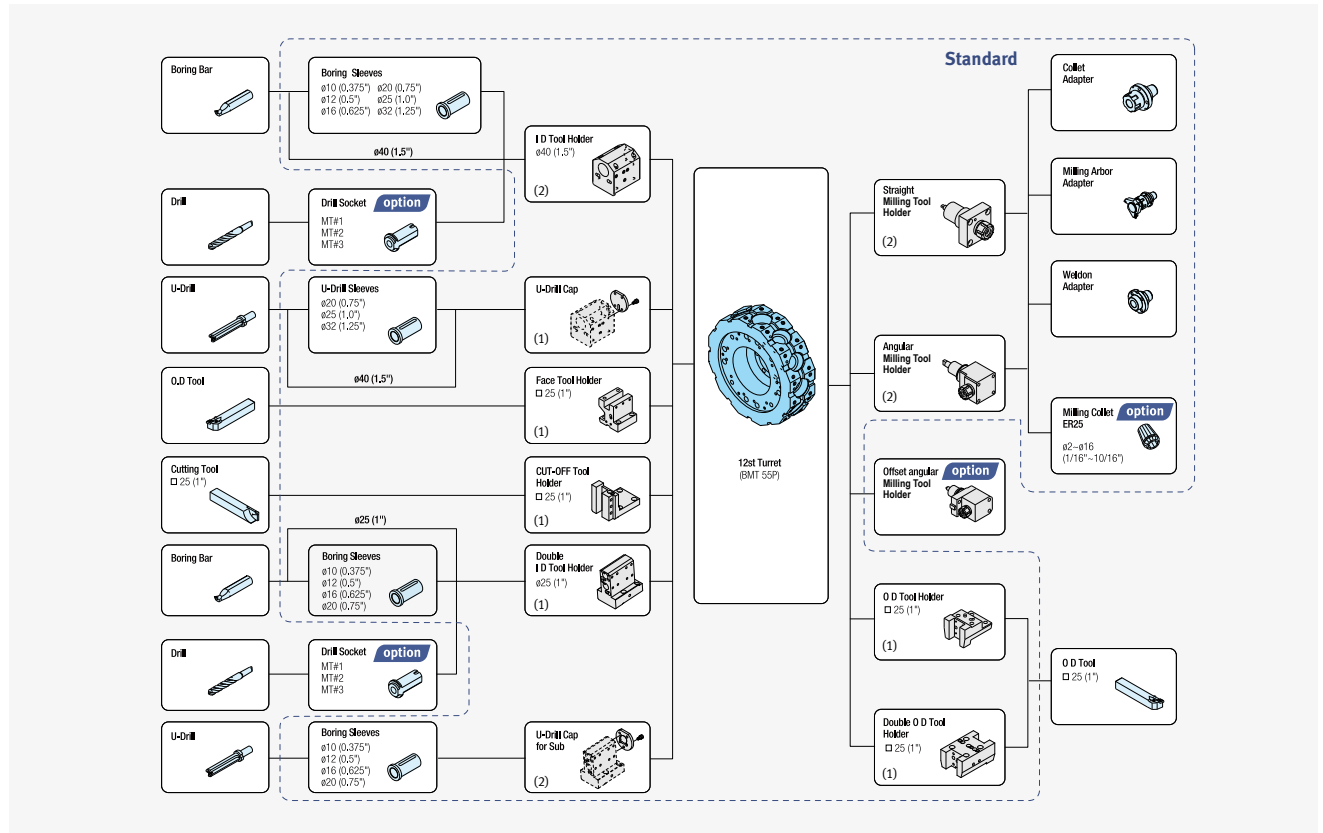


### PUMA 2100MS / 2100LMS / 2100SY / 2100LSY (24 station - BMT55P) option

Unit : mm (inch)

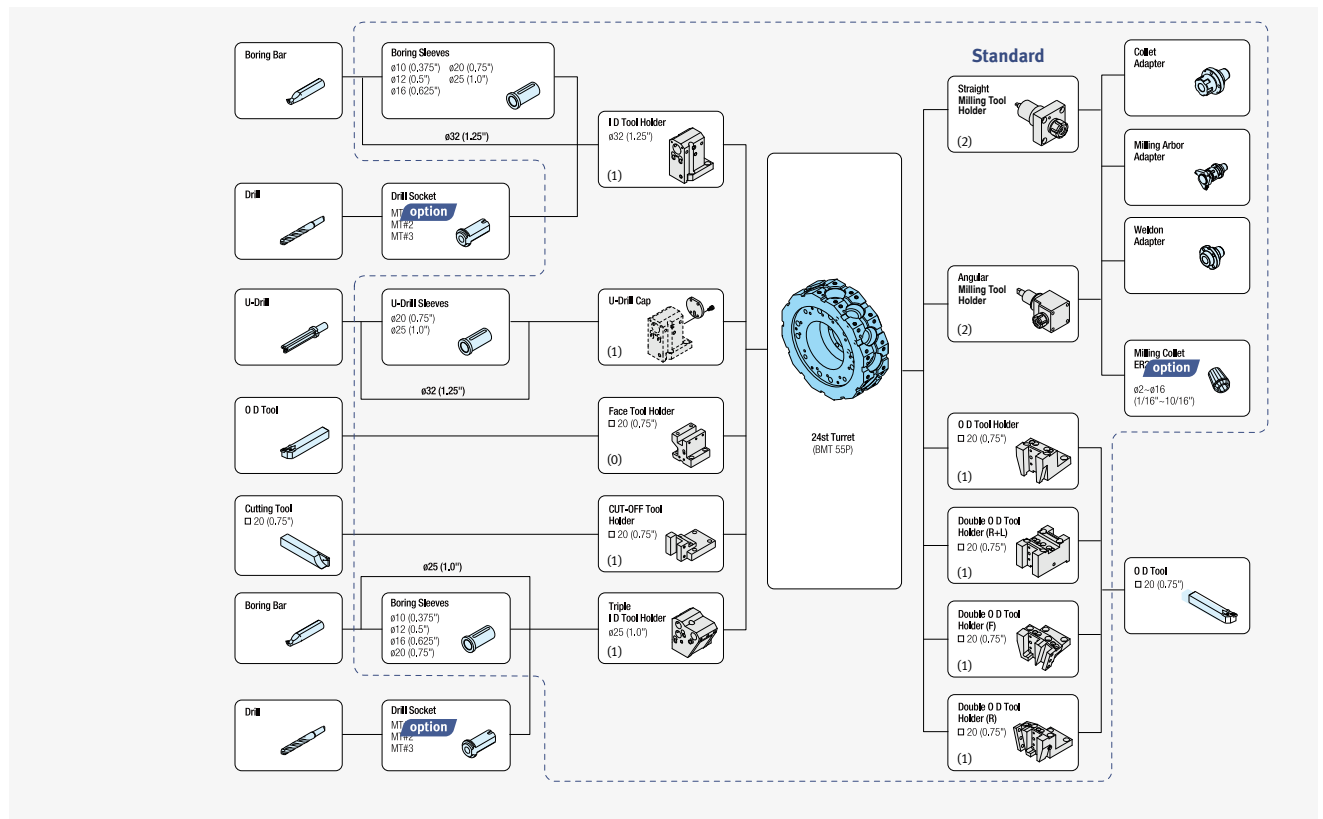


**PUMA 2600M / 2600LM / 2600Y / 2600LY (12 station-BMT65P)**

Unit : mm (inch)

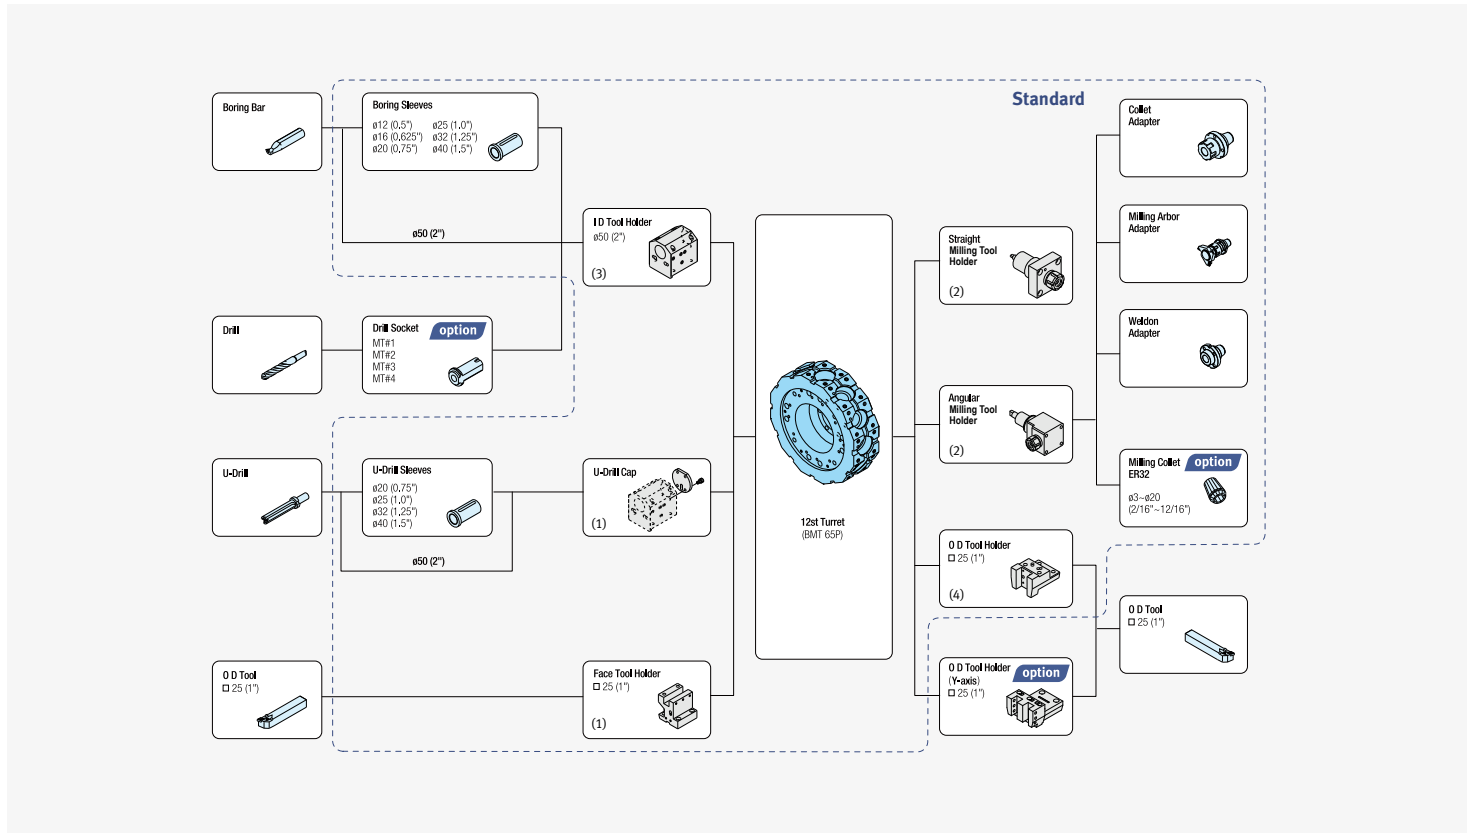

**PUMA 2600M / 2600LM / 2600Y / 2600LY (24 station. - BMT65P) option**

Unit : mm (inch)

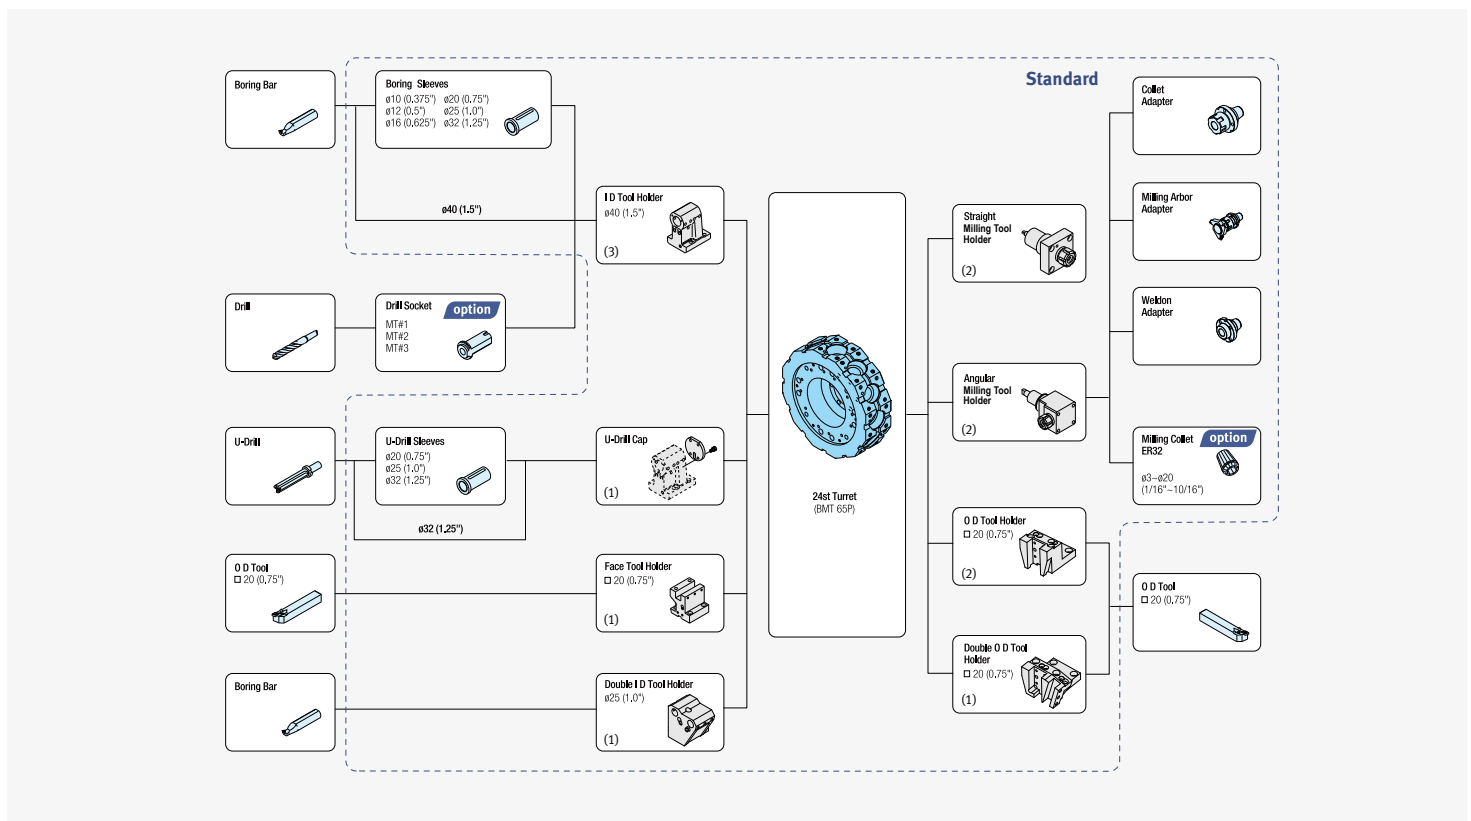

# Tooling System

## Basic information

- Basic Structure
- Cutting
- Performance


## Detailed Information

- Options
- Applications
- Capacity Diagram
- Specifications

## Customer Support Service


### PUMA 2600MS / 2600LMS / 2600SY / 2600LSY (12 station-BMT65P)

Unit : mm (inch)

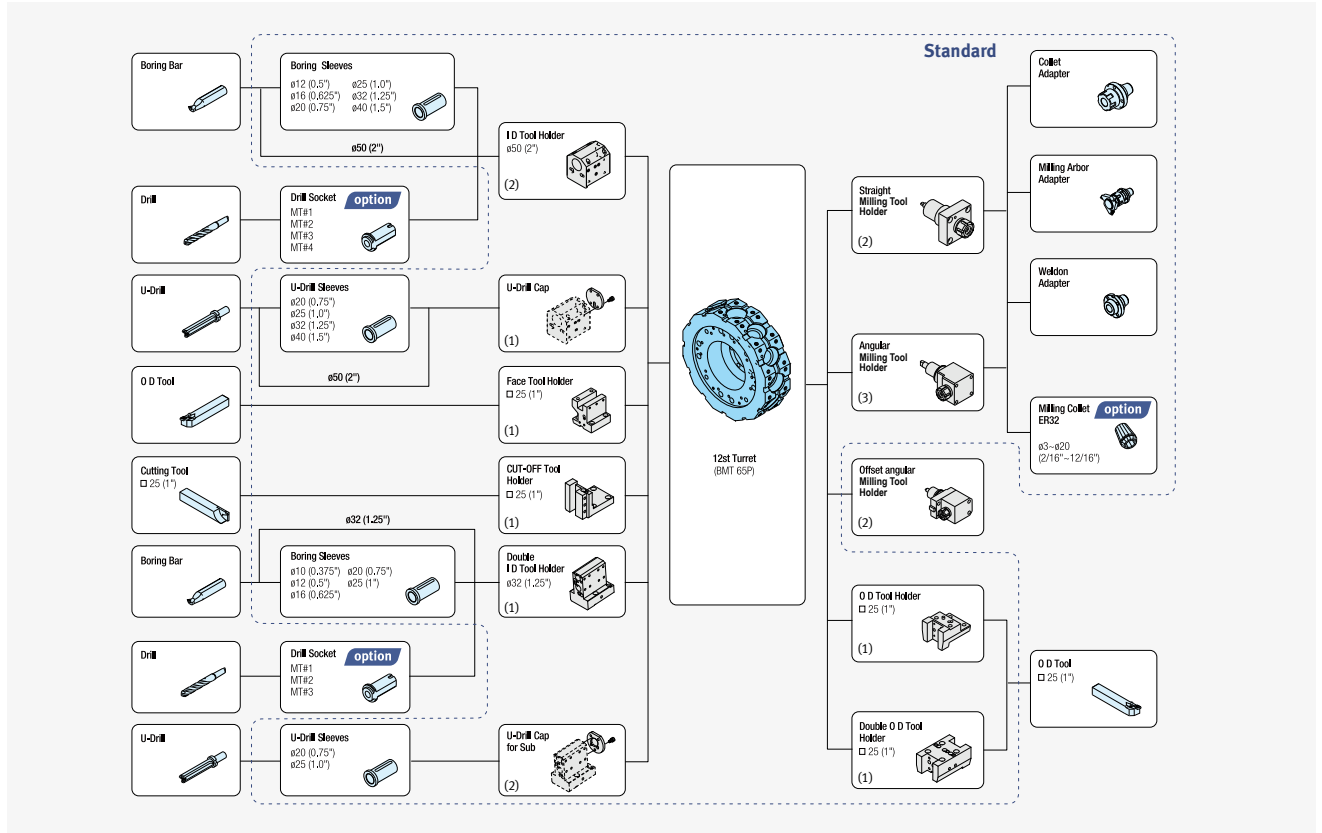


### PUMA 2600MS / 2600LMS / 2600SY / 2600LSY (24 station - BMT65P) **option**

Unit : mm (inch)

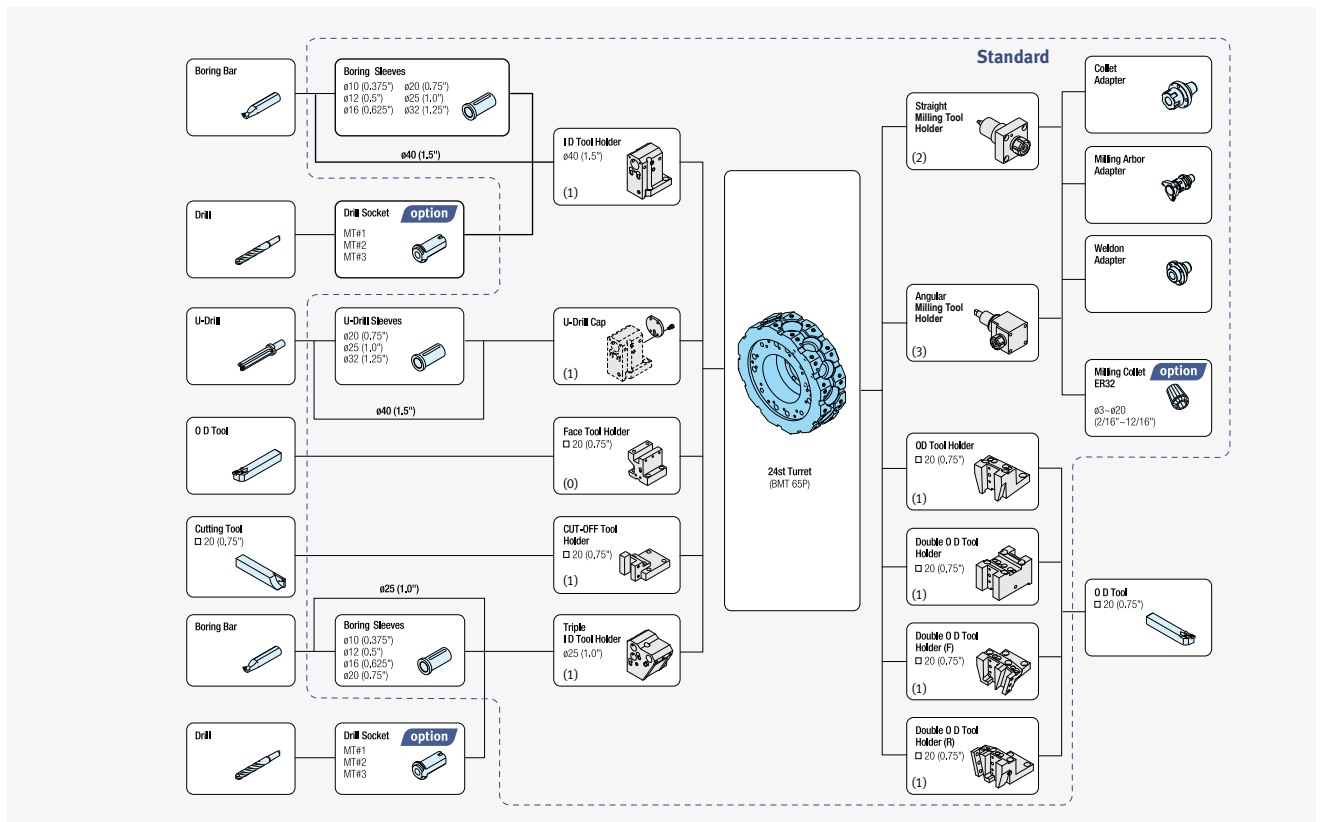

# PUMA 3100 / 3100L / 3100XL / 3100UL

Unit : mm (inch)

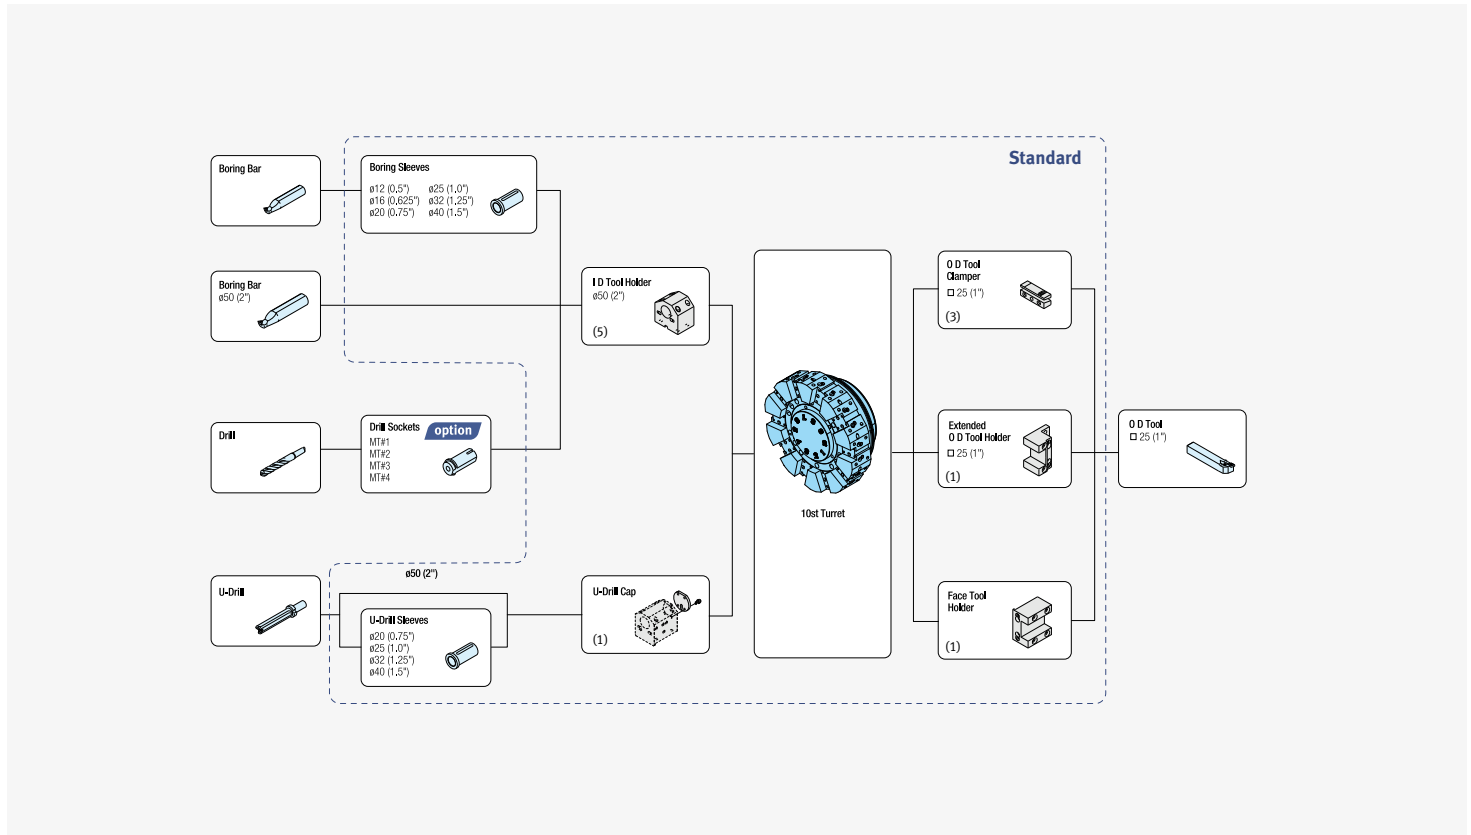

# PUMA 3100M / 3100LM / 3100XLM / 3100ULM / 3100Y / 3100LY / 3100 XLY / 3100ULY

Unit : mm (inch)

(12 station-BMT65P)

